

Collar cover·felt·silicon changing instruction



Caution

Please let the machine **cool down completely** before changing the cover.

There is risk of being **burnt if this is not done**. Please **power off** the power for all operations.

Collar cover Middle press cover (Black)

Screw × 2 (Front side)
LP690·LP690-V2·LP695

Screw × 2 (Right and left)
Only LP690-V2·LP695

① Remove the middle press cover

- ① Remove the middle press cover (Black) of front side.
(LP690: 2 screws LP690-V2/LP695: 4 screws)
- ② Remove the spring hook (4 places) which has fixed the cover and remove the collar cover.
*Have the ring of spring hook and remove it.
- ③ Install cover → felt (white) → silicon (yellow) to new collar cover.
Remove the stainless rods from old cover and install them.
- ④ Place a cover so that a name tag appears in front. Hook the spring hook (4places) on the stainless rods and fix the cover.
- ⑤ Install the middle press cover (Black).

Insert the felt (white) to cloth of both sides.

Silicon is installed so that an unevenness side may be in sight.

Insert stainless rods (2 places) from this hole.

Model

③ Set preparations of the collar cover

Spring hook
Front and rear Total 4

Has this

Caution:
Edge is sharp!!

② Remove the collar cover

Set name tag to the front.

Hook the stainless rods
Front and rear (2 places) Right and left (2 places)

④ Set the collar cover

⑤ Install the middle press cover (Black)

Number	SP-LP-CC-UE-1			Adaptive machine·Lot number	Designed	SANKOSHA
Date	Sept,2009.	REV	1	LP-690/V2/695	SP.Dep	

Cuffs cover·felt·silicone changing instruction



Caution

Please let the machine **cool down completely** before changing the cover.

There is risk of being burnt if this is not done. Please **power off** the power for all operations.

① Remove the cuffs cover


※The indicated procedure and quantity are the things only left cuffs.

Right cuffs should also change in the same procedure.

※The size of cuffs differs between LP690 and LP690V2/LP695.

LP690: Nut ×4

LP690V2/LP695: Screw×4

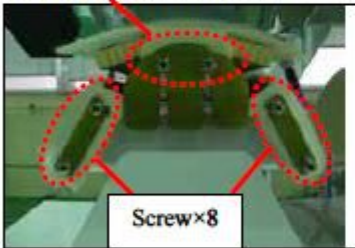

Screw×8



Fitting metal

Big 2 Small 4

Screw and nut are only loosened.

② Remove the felt

① Remove the cuffs cover.

(Only in cover exchange, install the cover in the procedure of ⑤.)

② Loosen the nut screw front and rear cuffs parts (Total 12). Pull the fitting metal and remove the felt and silicon.

※Nut and screw are exchangeable only by loosening.

③ Set to right and left cuffs in order of a silicon(small) → felt(small).

Install the fitting metal and tighten the screw.

※Be careful of direction of felt. (See in photo)

④ Set to center cuffs in order of the silicon (Big) → felt (Big).

Install the fitting metal and tighten the screw.

※Be careful of direction of felt. (Front and reverse) See in photo.

⑤ Install the cuffs cover.

※The cover has left and right. Install a name tag and a string outside.

※Pull a string strongly, and attach so that there are no wrinkles.

Felt (Big)


※Beige side should be in sight.

Not unevenness side is top



Pass hole to nut

※Felt (Big) surround felt (Small) and install it.

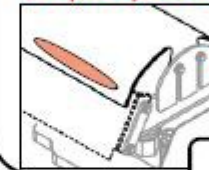

Fitting metal (Big)

④ Install the cuffs (Big)

Silicone (Small)


※Not unevenness side is top

Felt mall

※Beige side should be in sight.

※ Set the convex downward.

Fitting metal (Small)

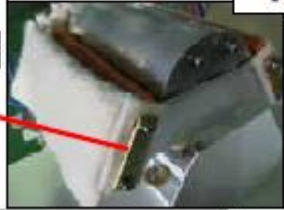

Pass hole to screw

③ Install the cuffs (small)

Name tag (Out side)

String (Out side·front)



⑤ Install the cuffs cover

Number	SP-LP-CFC-UE-1			Adaptive machine·Lot number	Designed	SANKOSHA
Date	Sept,2009.	REV	1	LP-690/V2/695	SP.Dep	